



# EASEL ASSEMBLY MANUAL


## SYMPHONY PRODUCTS

5601 FREEDOM BLVD.  
APTOS, CA 95003  
(831)685-4722 FAX (831)661-0243  
sales@symphonyproducts.com  
www.symphonyproducts.com

The easel comes in one box and assembles in just a few minutes. Lay out the parts. Here is what should be included in the box:

- A Front Legs
- B Center Support
- C Cross Leg Supports
- D Center Leg with clamp
- E Adjustable tray with clamps
- F Tray supports
- G Hardware including:
  - 4) 3" screws with wing nuts
  - 3) 1.5" screws with wing nuts
  - 4) 1.5" screws
  - 2) 5" screws with nuts

Note - some variation in hardware may occur as cane size varies

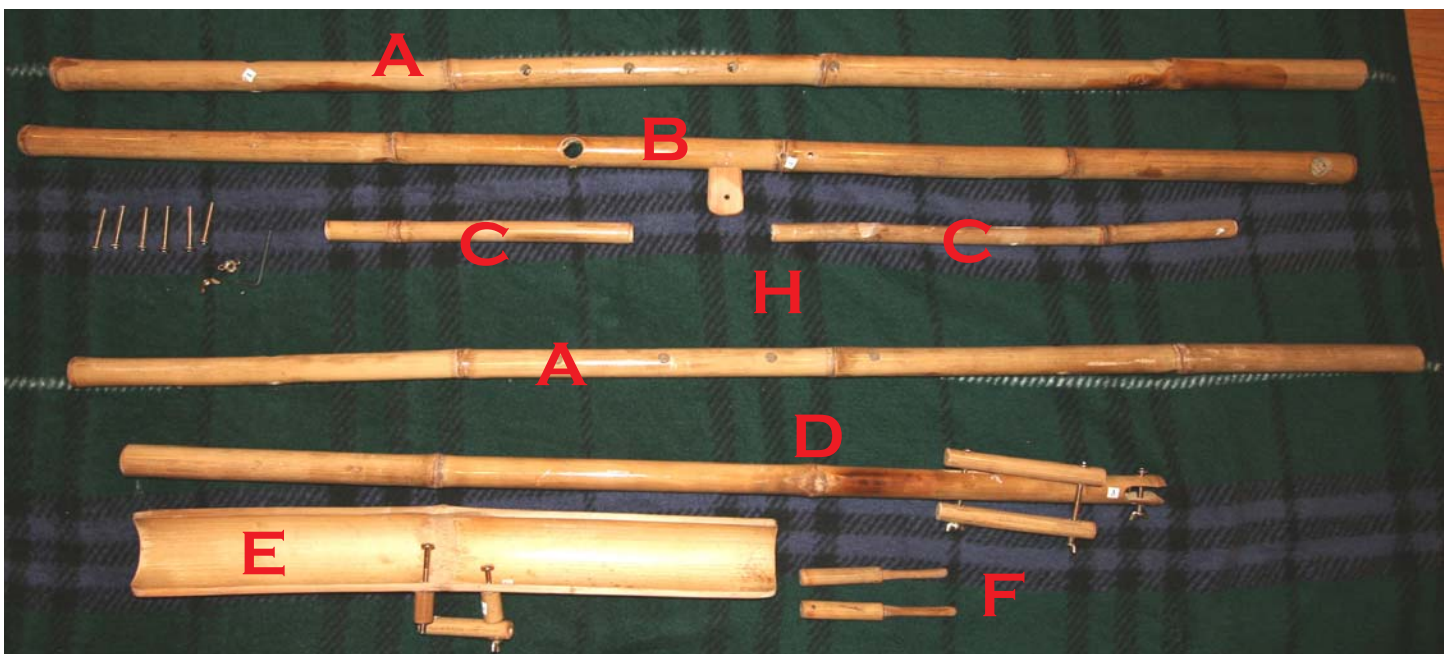


# EASEL ASSEMBLY MANUAL

Start by setting up the center section consisting of the front legs, center support and center cross supports. Use two 1.5" screws with wing nuts to attach the cross supports to the center support. Add the front legs with 1.5" screws. Do not tighten any screws until the assembly is finished. This will make it much easier to fit the parts. Tighten all the screws when the assembly is finished.



Pre-assemble the center leg as shown below with two 3" screws and one 1.5" screws with wing nuts. Attach to center support.

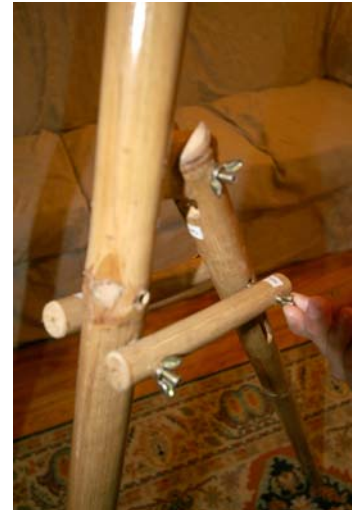

Pre-assemble the shelf as shown below with two 3" screws and wing nuts. Attach to center support. Use adjustable shelf supports to set position.

